


Standard Contour C-clamp shown for illustration purposes.

Note:

This instruction is applicable for both Contour and Harmony modules.

Contents

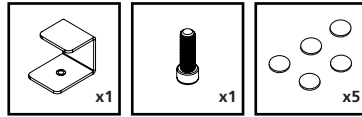

Additional information

Safety

- Installation is to be carried out in accordance with relevant Health & Safety regulations and only to be carried out by a skilled or competent person.
- The product should be installed to comply with the relevant national standards and be inspected and tested prior to being put into service (in the UK BS 7671 Wiring Regulations or BS 6396 Office and Educational Systems Best Practice).
- Product to be used only for the intended purpose of securing power modules to office furniture in office and commercial environments.
- Do not misuse, dismantle or re-configure the product because doing so will invalidate the warranty.


Standards

- Refer to the Declaration of Conformity.


Product care

- Clean using a dry cloth. No abrasives or solvents to be used on the product.


Attaching rubber feet

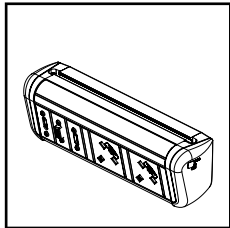


Ensure base of module is clean. Wipe with a clean cloth if necessary.

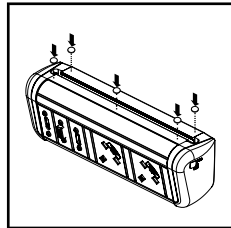

Place the rubber feet on the base of the module in the locations shown.

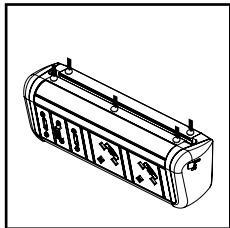


Press down on the feet firmly to ensure good adhesion.

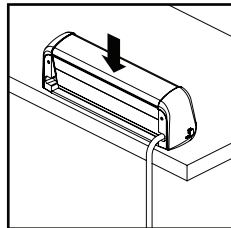


Position in desired location. Ensure room for cable entry/exit.


Attaching C-clamp

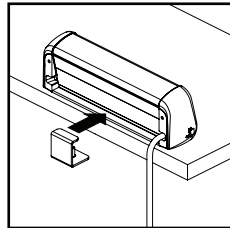


Offer up the C-clamp to the rear of the module.

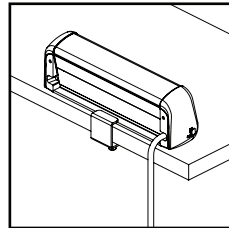

Ensure the clamp top adequately makes contact with module.

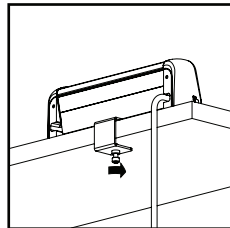

Use an allen key (not supplied) to tighten the bolt and secure in place.

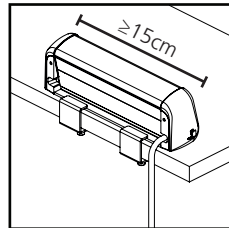

Use 2x clamps if the module is 15cm or greater in length.

